


# Touch Free Hand Sanitizer

## Instructions To Secure Dispenser

### Hardware Kit Includes:

- 4 - anchors
- 4 - #1- 1" screws
- 4 - screw head covers

### Tools needed:

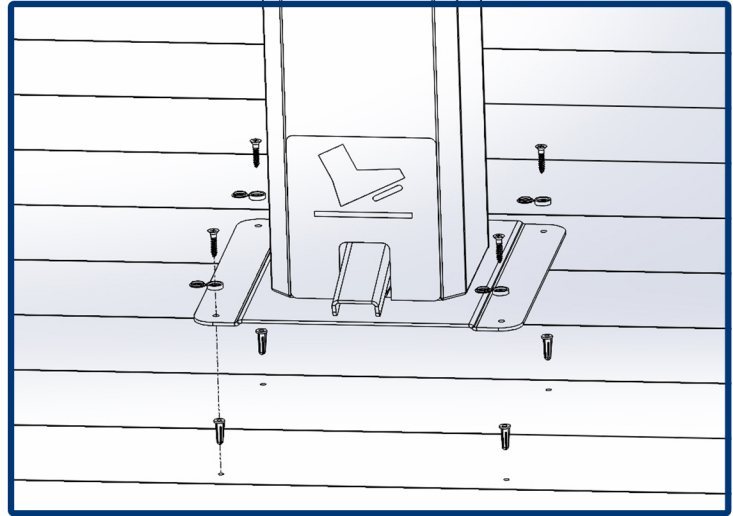

- 1) Place unit in desired location and mark drill hole locations on surface with your pen or pencil
- 2) Set the dispenser to the side and drill 3/16" diameter holes in the four marked locations (use appropriate drill bit for material being drilled into)
- 3) Insert anchors into drilled holes and firmly tap into place with a hammer (anchors must be seated completely)
- 4) Line up dispenser in place to match mounting holes with drilled holes/anchors
- 5) Position bottom portion of screw cover over hole and while holding it in place, drill the screw in completely. Once in place snap the screw cover closed.
- 6) Repeat step #5 until all four corners are secure